


# Scania EURO6 AdBlue Emulator Installation

Things to do in order to install AdBlue Emulator on Scania Euro6. First, you must find AdBlue socket of the vehicle. Socket resides inside axle area, Located exactly inside the axle.

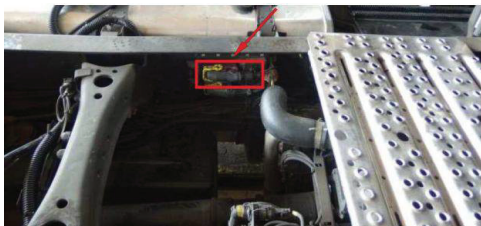

Emulator	AdBlue Socket	AdBlue Socket No
Black (gnd) -	Thick Black	4
Red (vcc) +	Green	12
White (Can H)	Orange (Can H)	22
Brown (Can L)	Black (Can L)	19

12. Cut the green wire. AsBlue should not go to the brain with electricity.

You should not forget that you must remove DPF(diesel particulate filter). The reason for that is, when AdBlue not used these filters may get dry. To prevent this, you must remove them. If you do not remove them, you may see DPF and engine error on vehicle panel.

You should definitely cancel the DPF after installing the AdBlue Removal Emulator